



# Magic One Step II

Magic One Step II can be used as an alkaline presoak or rocker panel cleaner.

## Dilution

Dilution rates range from 17 to 48:1 with water for use as an alkaline presoak or rocker panel cleaner.

## Application

High pH (alkaline) Presoak

- Used in Tunnels
- Used in In-Bays-Automatics (Soft Touch/Touch Free)
- Used in Self-Serve
- Alkaline presoak
- Rocker panel cleaner

## Technical Data

Appearance: Pale Amber Clear Liquid  
 Biodegradable: Yes  
 Foaming: High  
 Odor: Mild Alkali  
 pH: 14.0  
 Rinsing: Complete  
 Stability: Good  
 Wetting Ability: Excellent

## Storage Instructions

Wear all appropriate Personal Protective Equipment (PPE). Wear respiratory protection or ensure adequate ventilation at all times as vapors can accumulate in confined or poorly ventilated areas. Avoid aerosolizing product. Use the product in a manner, which minimizes splashes and/or the creation of dust. Keep containers closed when not in use. Store at room temperatures, i.e., 40 to 95°F (4 to 35°C). Do not allow concentrated product to come in contact with aluminum. Store in a cool location. Provide ventilation for receptacles. Store away from foodstuffs. Do not store together with acids. Store in a cool, dry conditions in well-sealed receptacles. Keep container tightly sealed. Product may become unstable if cooled below 40°F. Keep product warm and above bare concrete floors. If product becomes unstable, add hot water and mix well. Product can be used if thawed properly.

## Product Code

CW755

## Safety


**Hazard statements:** Causes severe skin burns and eye damage. Causes serious eye damage.

**Signal Word:** DANGER



**Precautionary statements:** Obtain special instructions before use. Do not handle until all safety precautions have been read and understood. Do not breathe dust/fume/gas/mist/vapours/spray. Wash hands and exposed skin thoroughly after handling. Wear protective gloves/protective clothing/eye protection/face protection. Immediately call a POISON CENTER or doctor/physician. Specific treatment (see First Aid on this label or consult the SDS). Wash contaminated clothing before reuse. **IF SWALLOWED:** Rinse mouth. D NOT induce vomiting. **IF ON SKIN (or hair):** Wash with plenty of water. **IF INHALED:** Remove victim to fresh air and keep at rest in a position comfortable for breathing. **IF IN EYES:** Rinse continuously with water for several minutes. Remove contact lenses if present and easy to do – continue rinsing. IF exposed or concerned: Get medical advice/attention. Store locked up. Dispose of contents/container in accordance with local/regional/national/ regulations.

## National Fire Protection Association (NFPA):

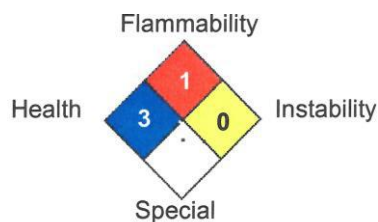

## Shipping

UN3266, Corrosive liquid, basic, inorganic, n.o.s. (Potassium hydroxide) 8, PG II